

## Beko CEG5311X Self-cleaning instructions

### 6.2 Self-Cleaning

When  is flashing, it indicates that the appliance needs to undergo self-cleaning. The appliance will remain in the best condition if this function is performed at least once a month or more regularly depending on the hardness of water used. To do so...

1. Fill the water tank to the max line.
2. Add one pack of cleaning agent included in the box to the water tank.

**WARNING:** Do not use vinegar or other cleaning agents for the self-cleaning of this appliance. The cleaning agent might damage the appliance.

3. Plug in the appliance.
4. Press the Power button  to put it into Standby mode (All lights on)
5. Place a sufficiently large container under the coffee spout and nozzle (1250ml).
6. In Standby mode, press and hold  and the strong espresso button  for 5 seconds. You'll hear a beep then  and the strong espresso button  will be flashing (release the buttons).
7. Press the strong espresso button  once more to confirm activation of the self-cleaning process. To return to the standby mode, press .
8. The  self-cleaning light will flash, indicating that the appliance is self-cleaning.

**WARNING:** Keep skin/body away from hot water.

9. When most of the water in the water tank has been emptied (approx. 1250ml and 12 minutes), the  and self-cleaning button  will flash. Remove all the remaining solution from the water tank and fill the tank with normal tap water up to the max line.
10. Place a sufficiently large container under the coffee spout and nozzle (approx. 750ml).
11. Place the filled tank on the machine and it will detect that it there and the  will goes off. The appliance will continue the self-cleaning process.
12. When the self-cleaning process is completed, the appliance will switch off automatically.