

## SONIQ Smart TV remote pairing procedure

Remote has to be used with RF dongle in order to function properly. RF dongle comes in the same plastic bag that holds the remote. It is a black USB flash drive like device which is about 3.5 x 1.5 x 0.5 cm in size and labelled with QT166 RF Dongle on its side.

1. Charge up remote for 5 hours
2. Switch on remote
3. Switch on TV using remote
4. Switch off remote for 2 seconds and switch on again
5. Press and hold the RF button on the keyboard side of remote for 4 seconds
6. Plug in the RF dongle to TV USB port
7. Place remote next to TV and wait for a minute for pairing to complete

"How To" video

<http://bit.ly/1uheyev>

